



Northern Express Glass Ltd.

Critical Locations




BS EN 1279
CMS 3044



BS EN 12150
CMS 3032 T

Issue 3
10 August 2015

Some frequently encountered critical locations are shown and described below. The recommendations given are based on reasonable standards of behaviour by the building user.

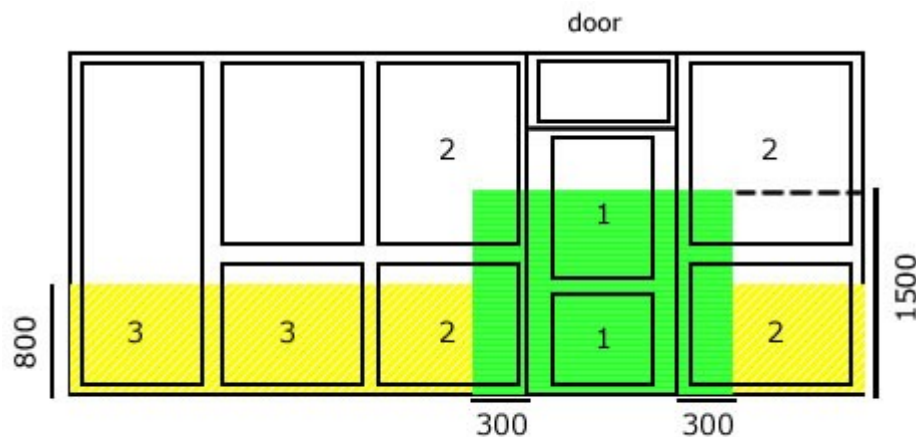

dimensions in millimetres

1. **Doors** (glazing wholly, or partly, within 1500mm from floor or ground level).
2. **Door side panels** (glazing wholly, or partly, within 300mm from the edge of a door and wholly, or partly, within 1500mm from floor or ground level).
3. **Low level glazed areas** (glazing wholly, or partly, within 800mm from floor or ground level (excluding that dealt with in door & door side panels)).

In critical areas, as described above considerations should be taken to ensure the correct use of safety glass.

For further information regarding glass type & safety classification please refer to BS 6262 part 4:1994.